

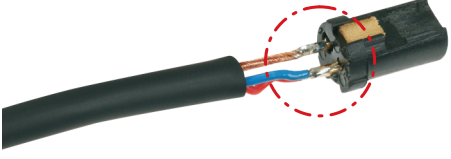
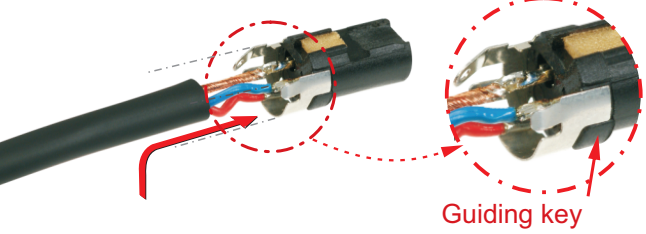


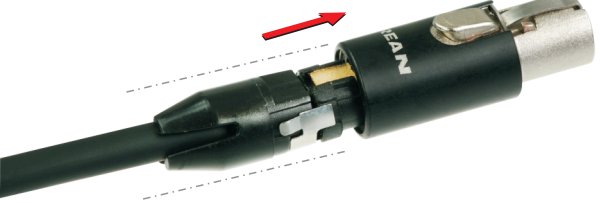



ASSEMBLY INSTRUCTION

TINY xlr | Cable Connector - RT*FC-B & RT*FC-B-W

- A** Slide the rubber sealing (1) (RT*FC-B-W only) and the boot (2) onto the cable.
- B** Prepare cable as shown.
- C** Insert wires into the terminals and solder them.
- D** Apply the grounding to the cable and position it on the insert.
Attention: Pay attention to the key.
- E** Grounding Option: Ground with housing, solder #1 to the solder lug of the grounding.
- F** Put chuck onto the cable.
Attention: Pay attention to the guiding key.
Black chuck: O.D. 2.0 - 3.5 mm
Blue chuck: O.D. 3.0 - 4.5 mm
- G** Slide insert and chuck together into the housing.
- H** Screw the bushing onto the connector. The RT*FC-B type is ready.
- 
- 
- 
- 
- 
- 
- 
- 

Rubber sealing assembly on page 2.

SINGLE BAG PACKAGING:

The rubber sealing can be easily applied by hand.



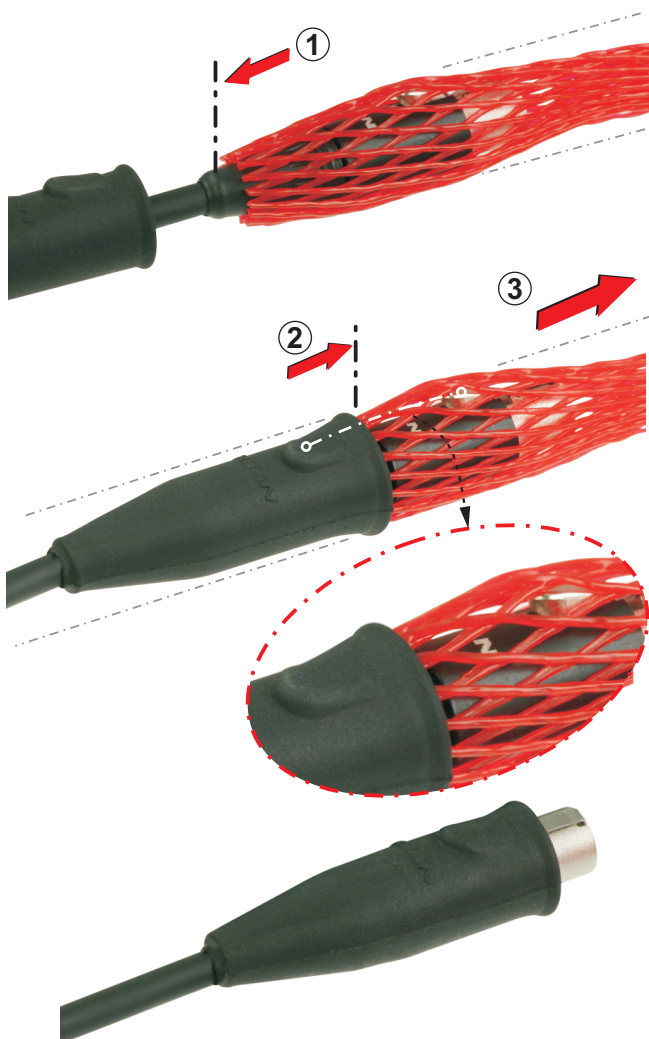
► Finish



Attention: Pay attention to the position of the latch (see the picture).

BULK PACKAGING:

For large quantity assemblies an assembly hose is supplied with bulk packaging (-D).



① Put the assembly hose onto the connector over the end of the boot (as shown in picture).

② Push the rubber sealing onto the assembly aid.

Attention: Pay attention to the position of the latch (see the picture).

③ Hold the cable and pull the assembly tool jerkily off the connector (the sealing jacket is pulled in position).

► Finish

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93
 NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704 / 438 9202
 NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439
 NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511
 NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796
 NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052